




Extractor Removal and Replacement Instructions

With the bolt face on end, rotate the extractor in a counter-clockwise direction until it rests in a position on the bolt body as seen in Fig. 2. Now push the extractor forward, away from the bolt handle. This will release the extractor from the spring collar, allowing its removal.

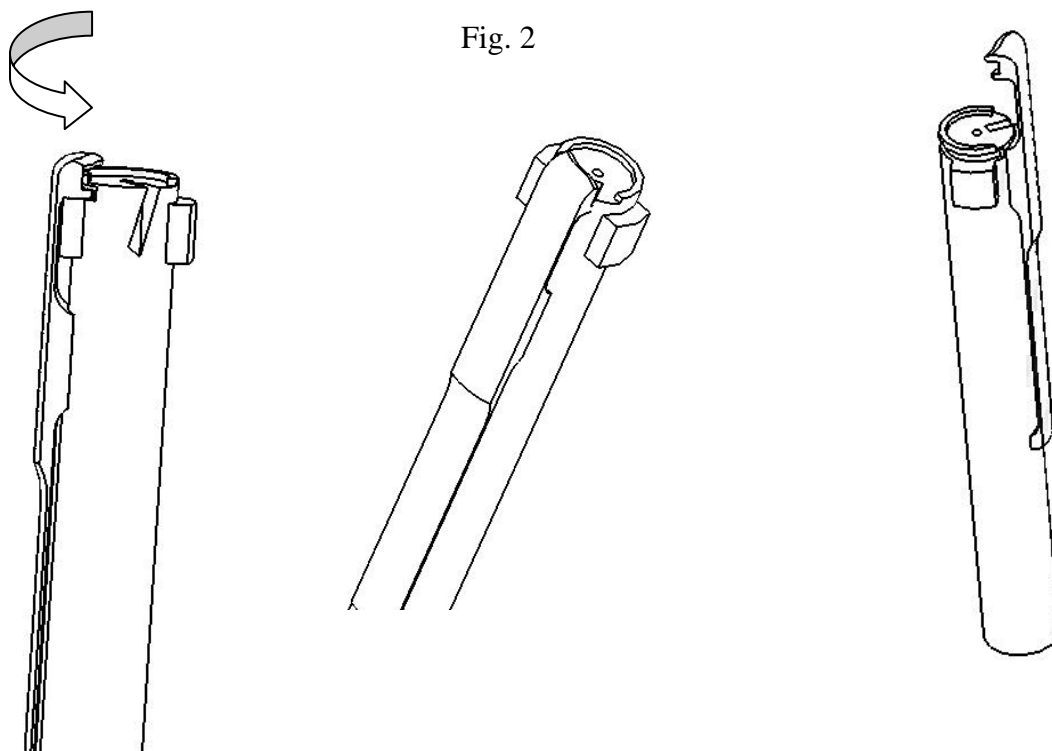

To reinstall, simply squeeze the spring collar with your fingers, lining up the extractor in the same position that it was removed in and slide the extractor down the bolt body. The nose of the extractor will need to be pushed out slightly away from the bolt, so that it can be sprung over the face of the bolt as you slide into place. Once you've pushed the extractor down far enough that it is now back inside the groove, simply rotate the extractor back to its original position.